

The FENIX logo is displayed in a bold, white, sans-serif font. The letter 'X' is stylized with a red vertical bar in the center. The background of the entire image is a red-tinted photograph of a person's hands on a treadmill console, with various safety and instructional labels visible.

FENIX

ASSET MANAGER

Installation Profile Manual

BY **SALTER**


Access at www.salter.cloud

- > From a web browser, access the url:

Q



- > Once the club is registered by SALTER, you will be able to enter your profile with the following data:

- 1 **E-mail:** Email address
- 2 **Password:** Provided by SALTER, that you can modify afterwards.

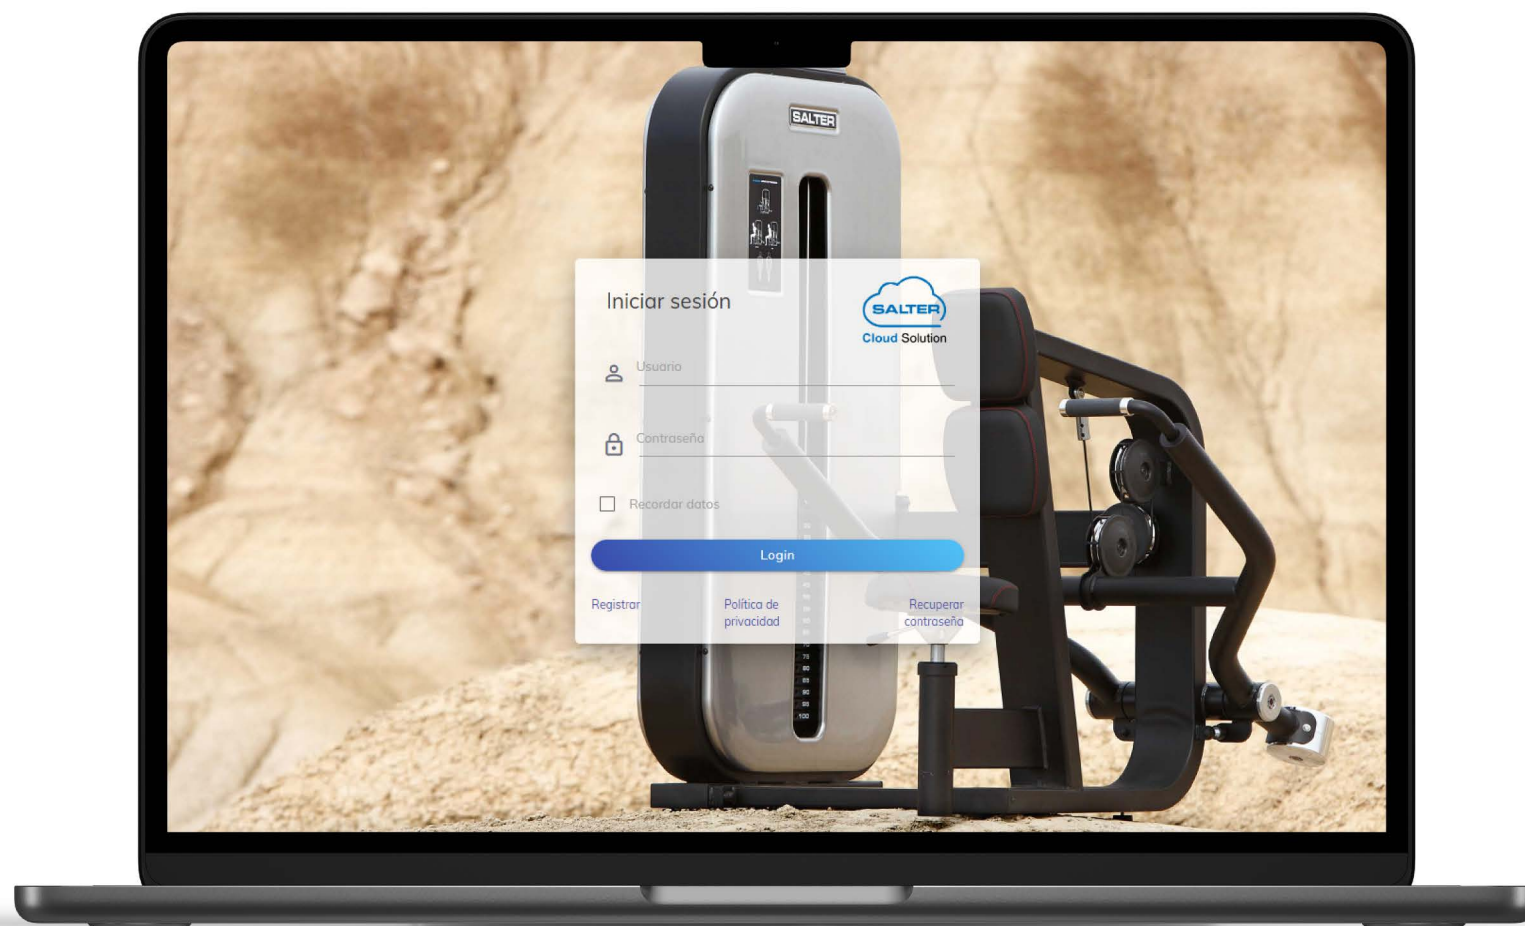

Languages


> You will be able to choose between:

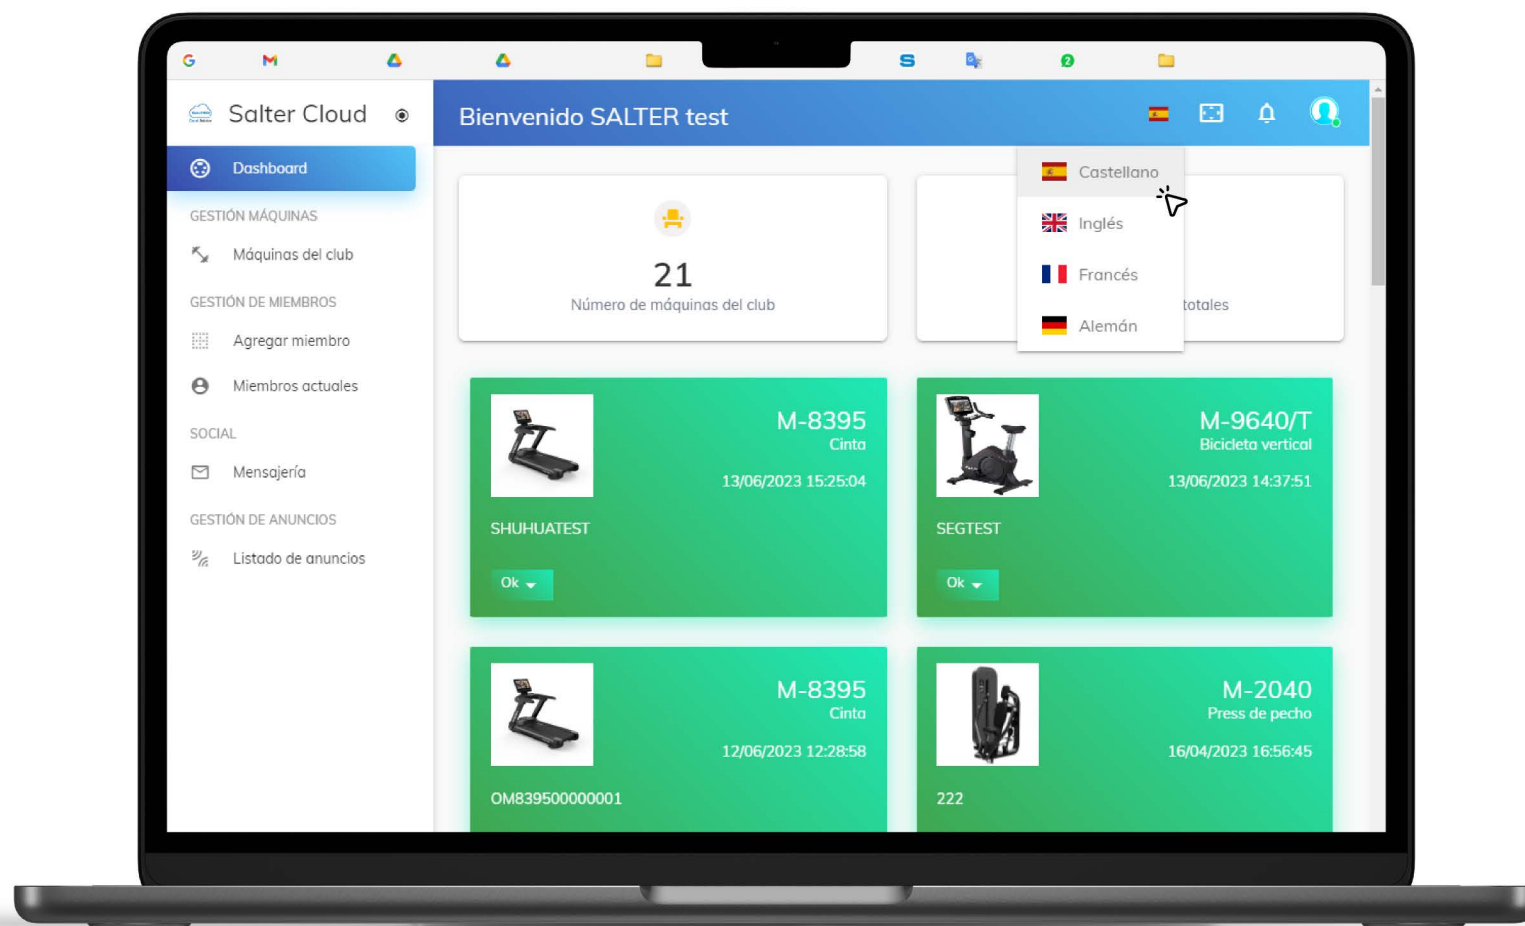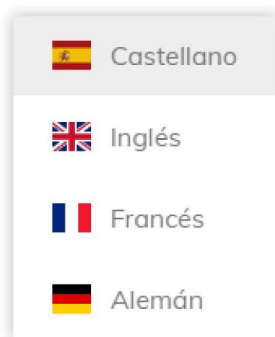

Dashboard


The Dashboard is the main screen where you can:

> **View SALTER equipment compatible with SALTER CLOUD:**

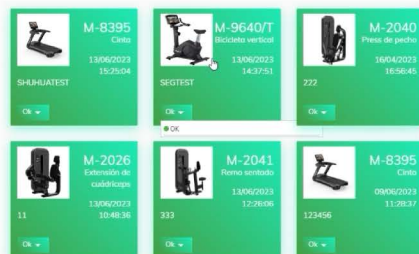

> **Visualize the status of the equipment:**

- 1 **Gray:** The console has failed to connect to SALTER CLOUD.
- 2 **Green:** The operation of the machine is correct.
- 3 **Yellow:** There are some minor faults in the machine that prevent the use of all its functionalities.
- 4 **Red:** There is a serious fault that prevents the machine from working properly.

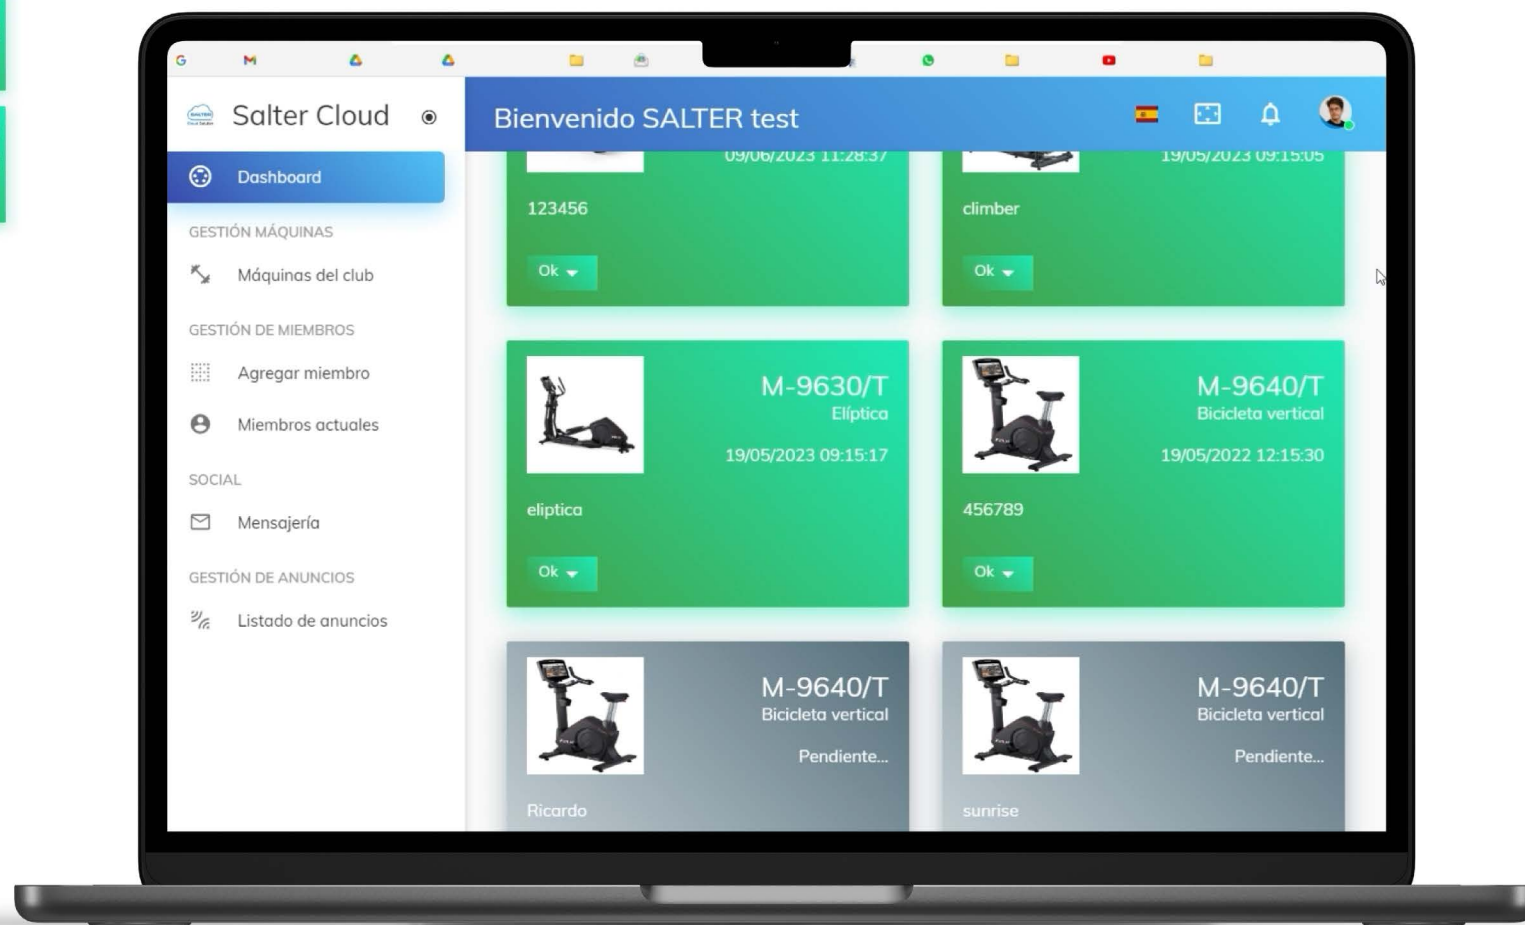

Dashboard



- › View the general usability statistics of this equipment.

Año Actual

Mes Actual

Últimos 7 Días

Últimos 3 Días

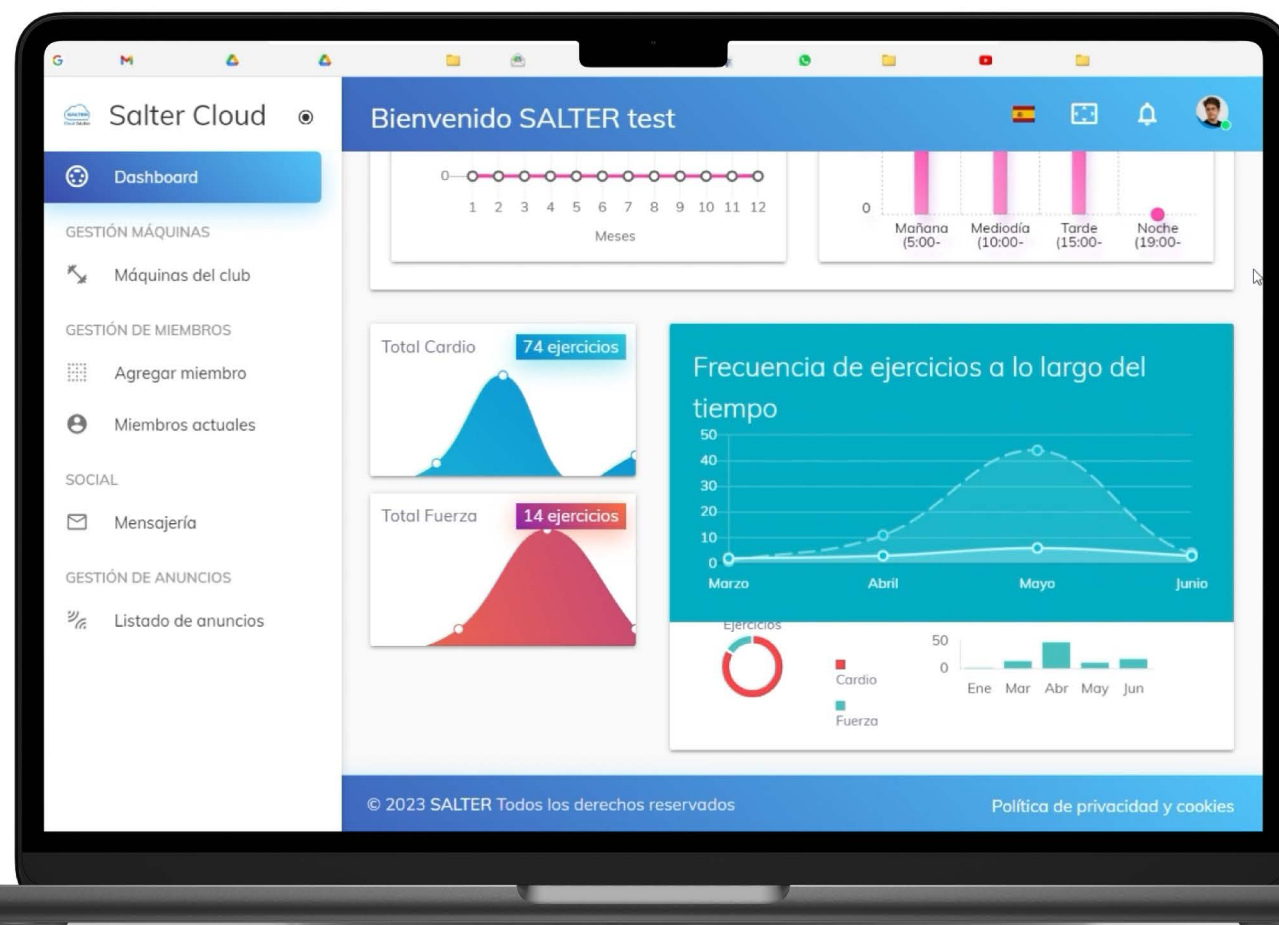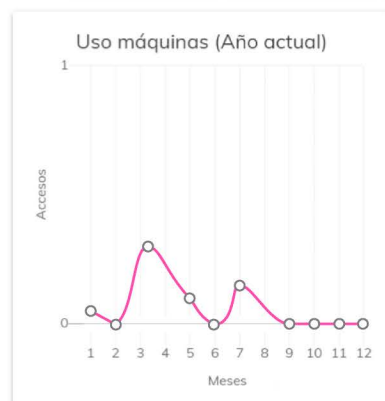

Dashboard > My Profile

> In the upper right area you can access options such as:


- 1 **Language switching.**
- 2 **Full screen mode.**
- 3 **Notifications.**
- 4 **My Account:** divided into "My Profile", "Messages" and "Logout".

By accessing My Profile, you can:

- 1 **Modify gym logo:** it will be the same logo that will be displayed on all SALTER CLOUD compatible machines.

The image must be a png file of 900x208px maximum resolution (max. weight 1MB).

- 2 **Modify the access password**

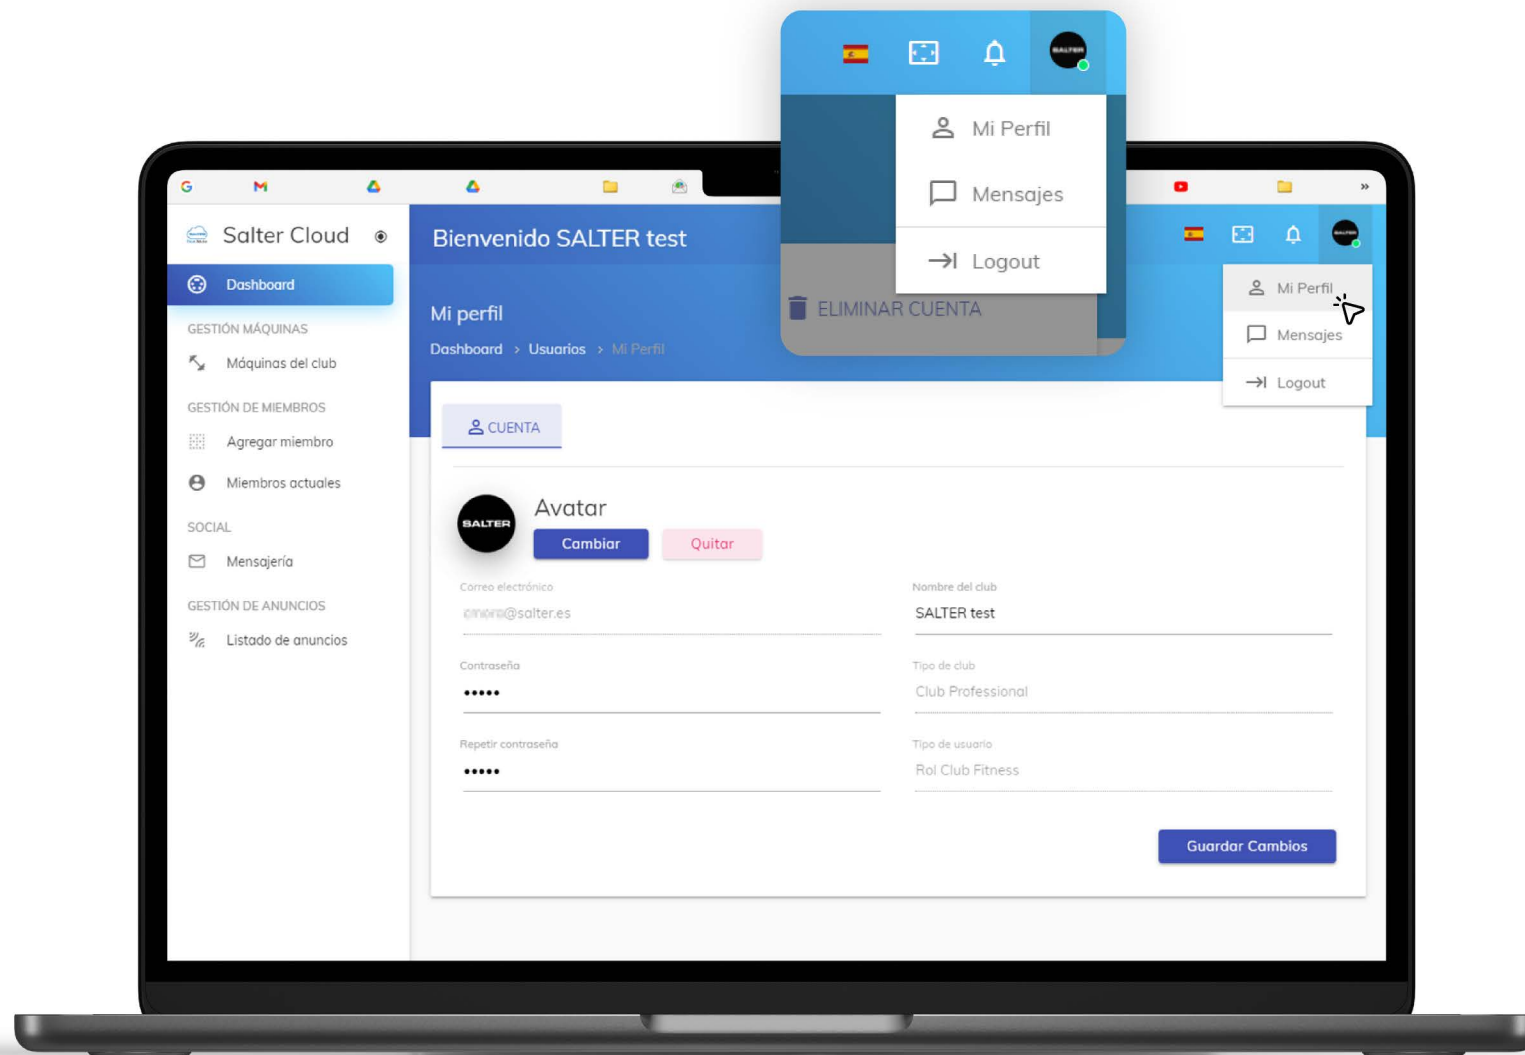

Club's machines

All compatible equipment can be viewed, in addition to:

> **View machines status:** Errors,...

Pendiente ▼

Ok ▼

> **Apply advanced search filters to facilitate the search.**

> **Edit product information:**

- 1 Location within the club
- 2 Name of the machine
- 3 Assign a color code

Editar máquina asignada

Modelo

M-9640/T - Bicicleta vertical

Número de serie

Color


Ubicación dentro del club

Nombre máquina

M-9640


Guardar

Cancelar

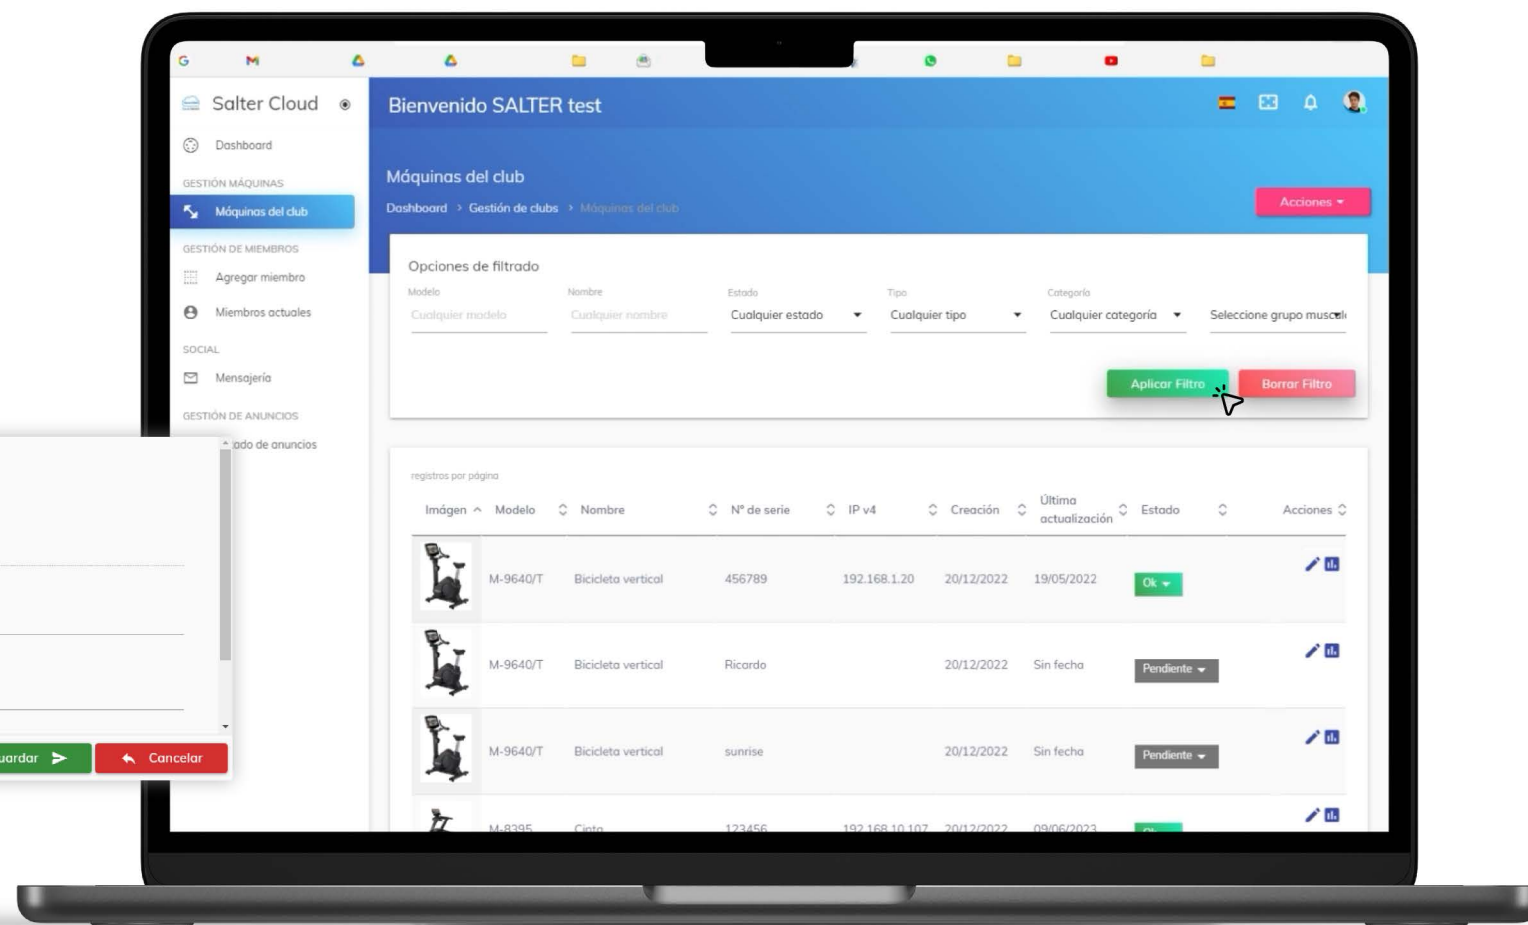

Club's machines


> View machines statistics:

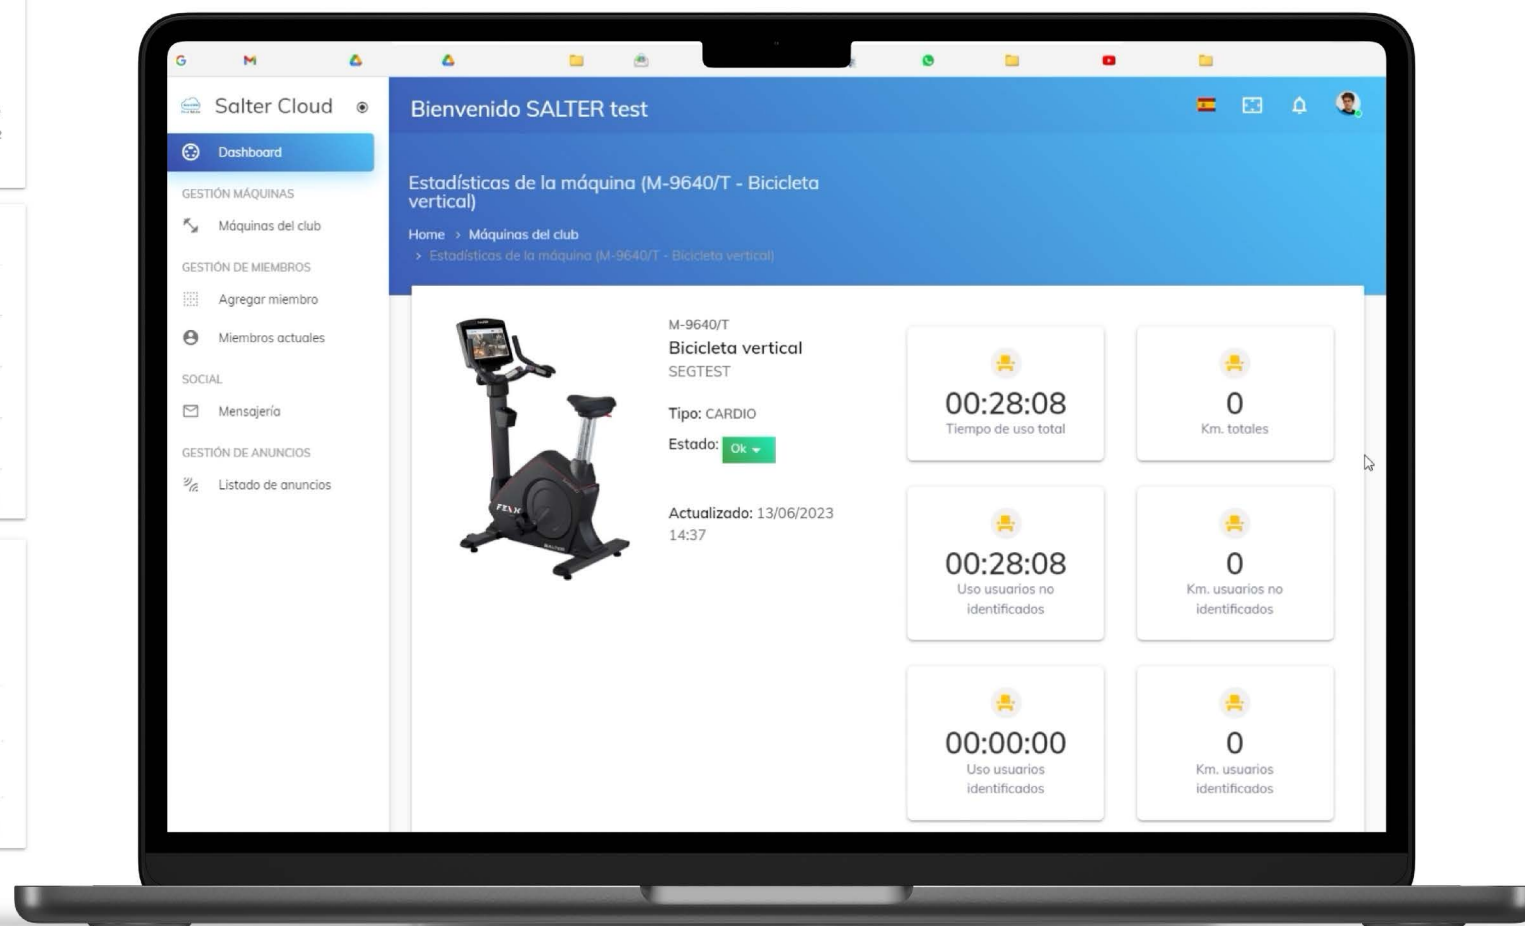

Add member


When a new member joins SALTER CLOUD:

- > **He/she will be eligible to be added as a gym member.**
- > **It is important that he/she is not registered in another gym with the same email address, otherwise he/she will not be shown as eligible.**
- > Once the member has provided the gym with **the email address that has been used to register at SALTER CLOUD**, use the search engine to search for him/her.
- > **If the email matches, it will be shown at the bottom. Then press the button on the right to link it to the gym.**
- > Once the member is linked, **the club and the member will be able to communicate with messages, which they will see through notifications.**
- > Besides, the gym will be able to **send promotions and announcements** to all members.

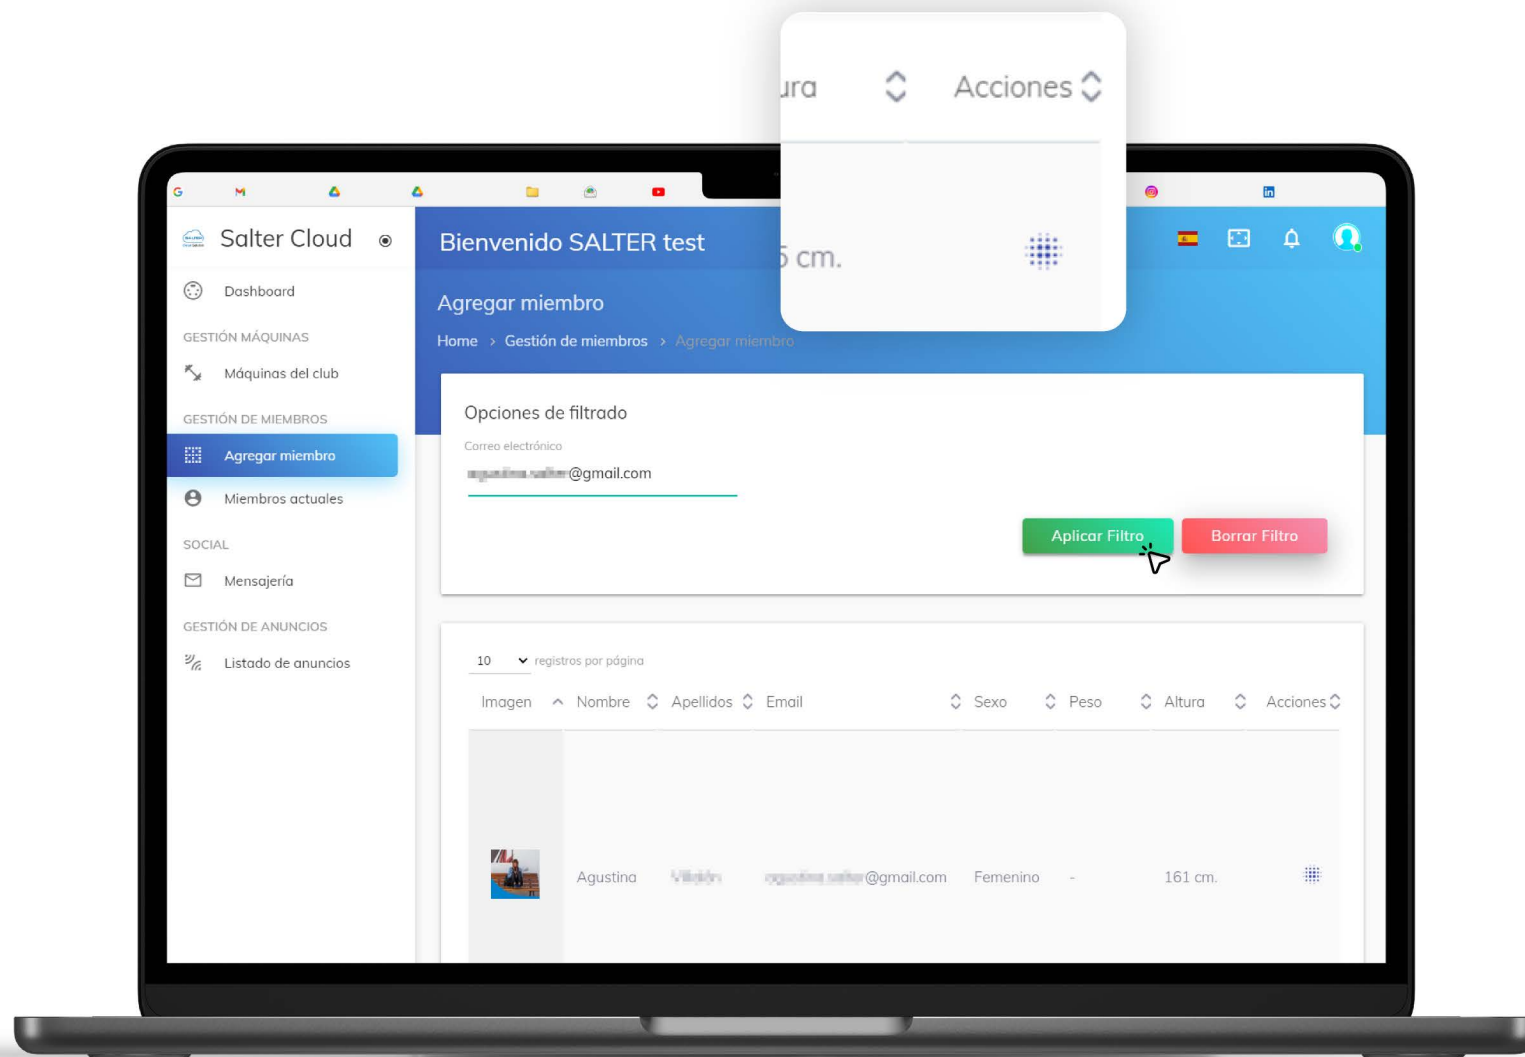

Current members

- > You can see here gym's **all current members**.
- > You can **filter members by name, surname, email or gender**.
- > In case the member leaves the club, **he/she can be deleted**.

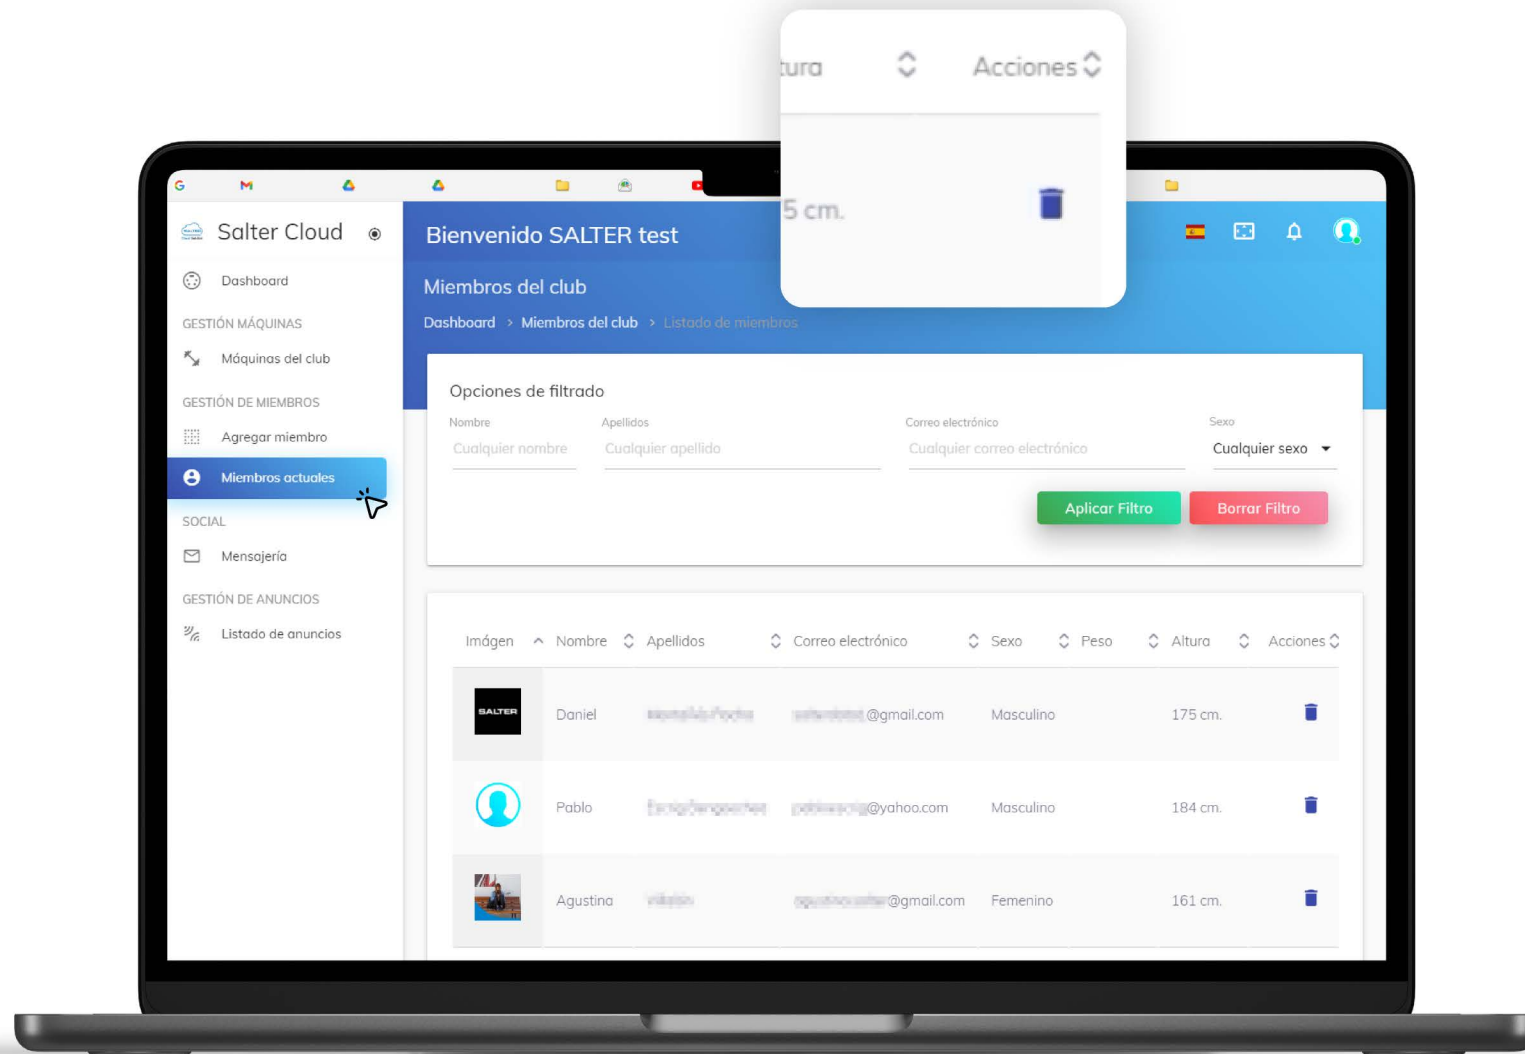


Messenger

> The SALTER CLOUD system has an **internal messaging system to communicate between members and the club and vice versa.**

> To send a message, **select the icon at the bottom right and compose the email. It will only be possible to send e-mails to registered members within SALTER CLOUD.**



> The club may also use this tool to **communicate directly with Salter.**

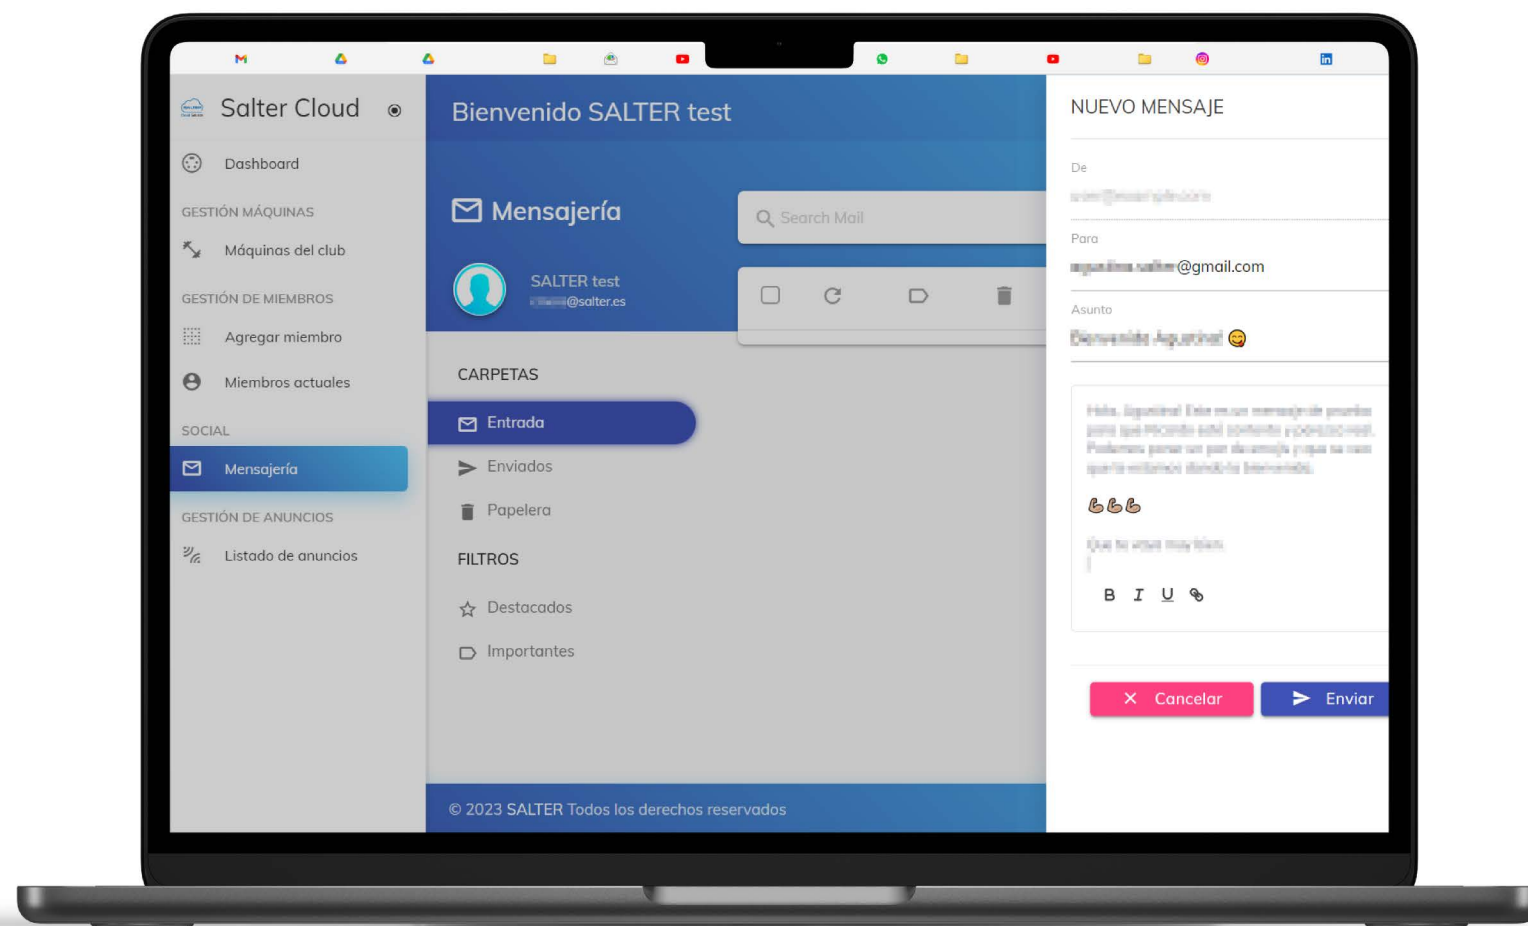


Ad list

- > The club is able to **send announcements to its members** which will be visible every time they access their profile at www.salter.cloud.
- > In the lower part you will be able **to see the existing ads.**
- > To create a new advertisement, click on the upper right button **"Actions"** > **"New advertisement"** and a window will open to be filled in.

Acciones ▾

The advertising image must meet the following requirements:

- 1 **Maximum size:** 1 mb
- 2 **Format:** .jpg o .png
- 3 **Minimum resolution:** 800x240px.

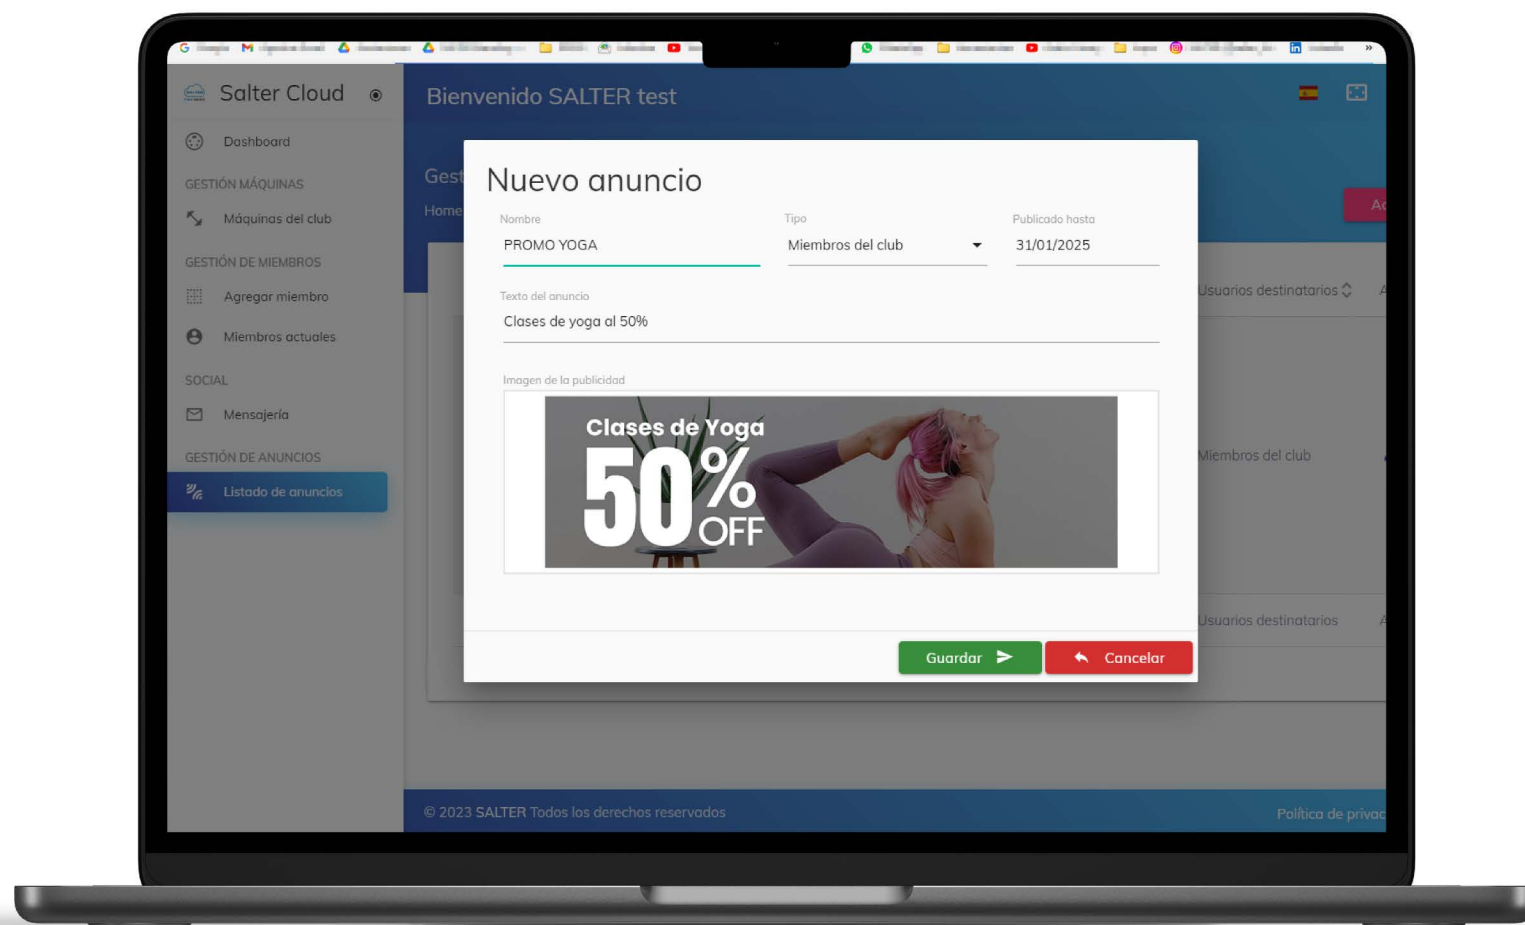

SALTER

